



# RST 9.1

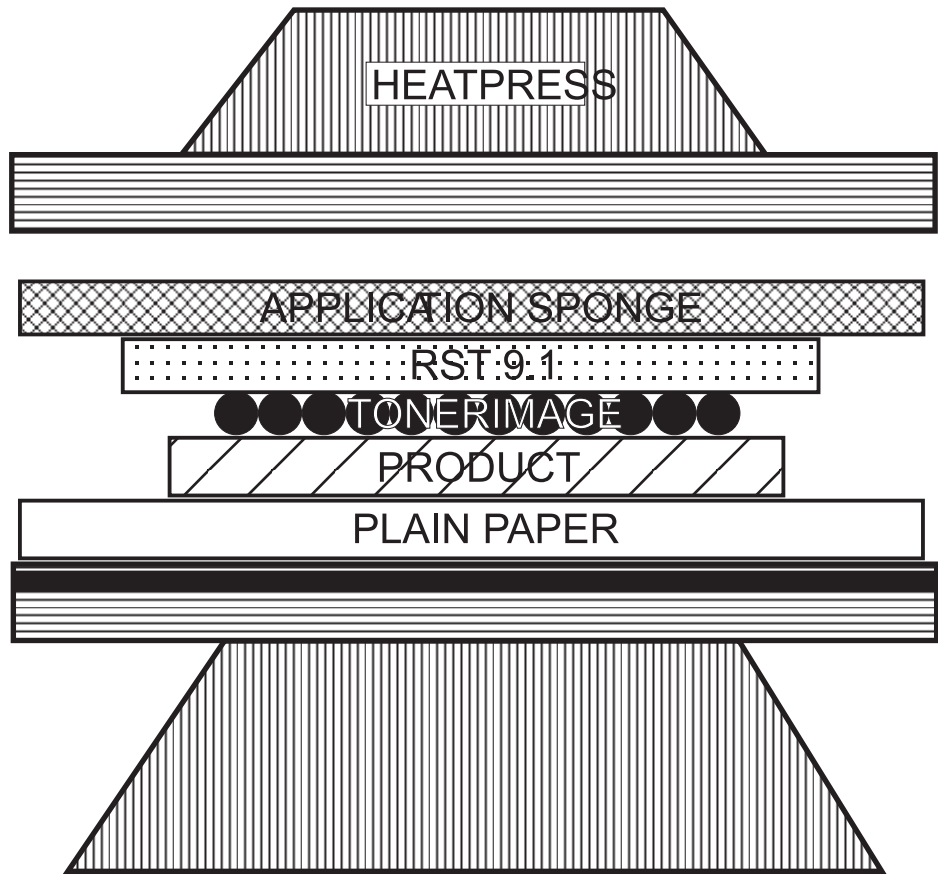

*Note: Before you press spray mist of water on top of the Application Sponges to lightly moisten it. The moisture will turn into steam when pressed and will help to mold the RST 9.1 into uneven areas of the product. It will also stop the paper from curling.*



## PRINT

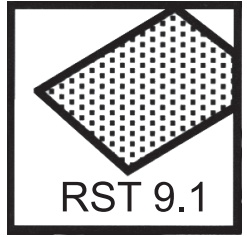


RST 9.1




MIRROR

## PRESS

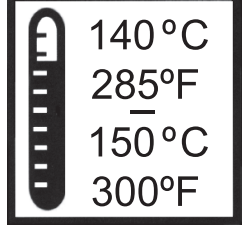

140°C  
285°F  
150°C  
300°F

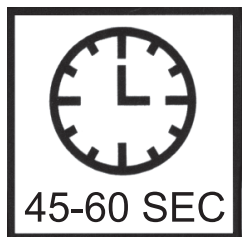

45-60 SEC



60-80 PSI  
MED/HIGH

## SOAK



H<sub>2</sub>O

COLD

Take product off the HeatPress when finished pressing. Spray the RST paper with water and wait until it completely comes loose from the toner image. Remove RST paper and wipe the image area with a damp/wet towel or cloth.  
Tip: Very rough surface cover image with T.Seal (NRP) and press again for 5 seconds.